

iLive operating firmware is regularly updated with improvements and new features. Both the iLive and the T Series run the same firmware. Check [www.allen-heath.com](http://www.allen-heath.com) for the latest version available.

**Note:** All three parts of the system, the MixRack, Surface and TouchScreen are updated at the same time. For iLive to work correctly all parts must run the same version. Make sure you update all iLive systems in your inventory.

**Note:** Do not use a USB key that has been partitioned. Ensure the key has at least 40MB of free space. Delete any existing Firmware folder on the key.

**Step1 Find out about the latest Firmware version**

Visit [www.ilive-digital.com/firmware/](http://www.ilive-digital.com/firmware/) Download and read the Release Notes.

**Step2 Download the Firmware**

Save the zipped file to your Desktop or folder of your choice.

**Step3 Extract the Firmware folder**

Unzip the file. You should find a folder called Firmware. Included in the folder are the data files needed for the update, a text file which displays the version number, and two sub folders with factory default library and show files.

**Step4 Copy the Firmware folder to your USB key**

First **delete** any existing Firmware folder on the USB key. Next, copy the Firmware folder to the **root** directory of the key. Do not change the folder name.

**Step5 Save your current iLive settings**

Updating the firmware restores the console parameters to factory default setting. Current user settings are lost. If you want to keep your settings make sure you first archive them as a User Show. These are not overwritten by the update.

**Step6 Plug in the USB key**

Plug your key into an iLive USB port. Go to the UTILITY / Firmware screen and select Update Firmware. Green ticks should be displayed indicating that firmware is found on the key. Check for the correct version number.

**Step7 Perform the update**

Select Perform Update and confirm OK. It takes around 1 minute to complete the update. Touch OK to restart the system. This takes around 2 minutes.

**Step8 Recall your settings**

Recall a Template Show or the User Show you saved before the update to restore your settings.

**Step9 Download and install the latest version of iLive Editor software**

The version of Editor software run must be compatible with the firmware version. Check <http://www.ilive-digital.com/editor.asp>.